

Franke Drinking Water System

Spout and Valve Replacement Guide

Please study the instructions carefully while referring to the drawing

- 1 Important - turn off the mains water supply to the purifier before starting work.**
A shut-off valve was supplied with the system for this purpose and will be located on adjacent pipework.

- 2 Turn on the dispenser tap. This will confirm that the water supply is turned off and release the pressure in the system.

- 3 Remove handle **A** by a firm upward pull.

- 4 Unscrew valve mechanism **C** using a 17mm socket wrench and remove splined insert **B** from valve.

Please note: The next three steps are for Spout replacement only.

- 5 Remove retaining screw **D**, by turning anti-clockwise.
- 6 Remove spout by pulling vertically upwards, replace spout and 'O' ring as required.

- 7 Replace spout **E** and screw **D**.

- 8 Fit the new valve and tighten it firmly in position.


- 9 Replace **B** and fit handle onto insert.

- 10 Turn handle to check that it turns freely, then leave it in the off position.

- 11 Turn on the mains water supply to the system. Check the tap is functioning correctly and that there are no leaks elsewhere in the system.

- 12 The system should now be ready for use.

A - Tap Handle **B** - Splined Insert
C - Valve **D** - Screw **E** - Spout

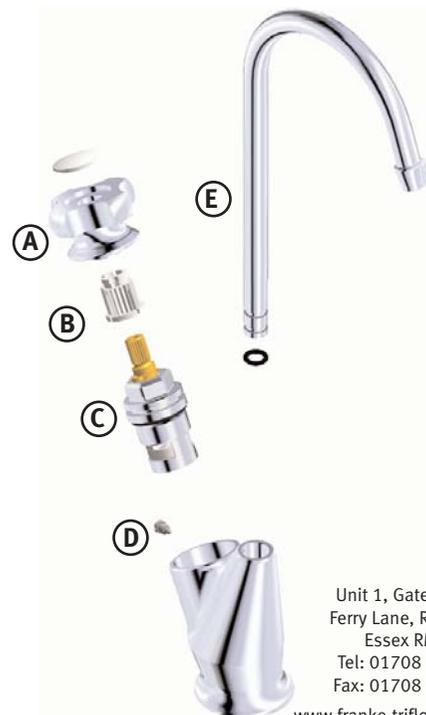

Triflow
Unit 1, Gateway XIII
Ferry Lane, Rainham
Essex RM13 9JY
Tel: 01708 526361
Fax: 01708 550220
www.franke-triflow.co.uk
cartridges@franke-triflow.co.uk

FRANKE

Franke Drinking Water System

Spout and Valve Replacement Guide

Please study the instructions carefully while referring to the drawing

- 1 Important - turn off the mains water supply to the purifier before starting work.**
A shut-off valve was supplied with the system for this purpose and will be located on adjacent pipework.

- 2 Turn on the dispenser tap. This will confirm that the water supply is turned off and release the pressure in the system.

- 3 Remove handle **A** by a firm upward pull.

- 4 Unscrew valve mechanism **C** using a 17mm socket wrench and remove splined insert **B** from valve.

Please note: The next three steps are for Spout replacement only.

- 5 Remove retaining screw **D**, by turning anti-clockwise.
- 6 Remove spout by pulling vertically upwards, replace spout and 'O' ring as required.

- 7 Replace spout **E** and screw **D**.

- 8 Fit the new valve and tighten it firmly in position.


- 9 Replace **B** and fit handle onto insert.

- 10 Turn handle to check that it turns freely, then leave it in the off position.

- 11 Turn on the mains water supply to the system. Check the tap is functioning correctly and that there are no leaks elsewhere in the system.

- 12 The system should now be ready for use.

A - Tap Handle **B** - Splined Insert
C - Valve **D** - Screw **E** - Spout

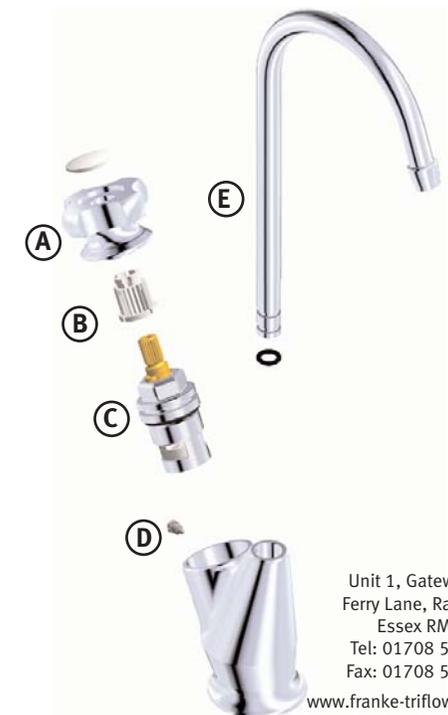

Triflow
Unit 1, Gateway XIII
Ferry Lane, Rainham
Essex RM13 9JY
Tel: 01708 526361
Fax: 01708 550220
www.franke-triflow.co.uk
cartridges@franke-triflow.co.uk

FRANKE